


セミチューブラリベット (中空リベット)

●リベット形状

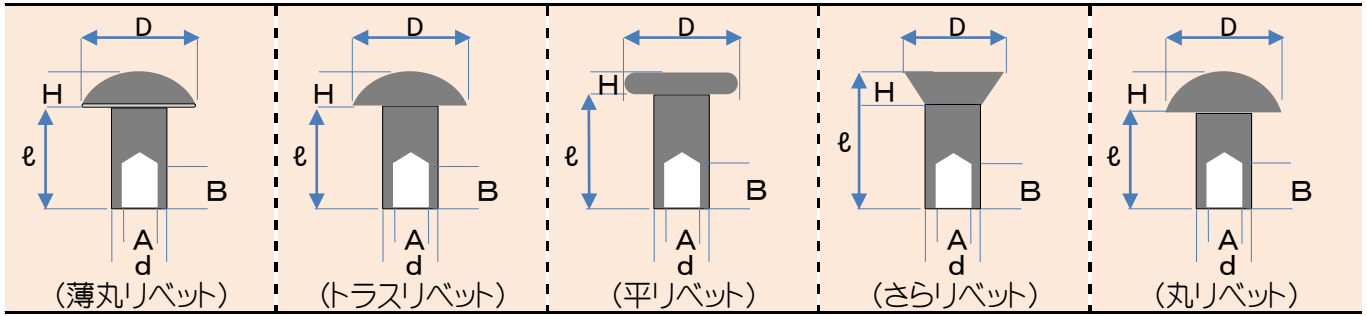

●基本寸法

単位:mm

呼び径	d		A		B		d1	k	薄丸・平						
	基準寸法	許容差	基準寸法	許容差	基準寸法	許容差			D		H				
									基準寸法	許容差	基準寸法	許容差			
1.2	1.2	+0.02 -0.05	0.8	±0.04	1.1	±0.1	(参考)	1.3	0.7	2.2	0	-0.3	0.3	±0.1	
1.6	1.6		1.1		1.4										
2.0	2.0	+0.02 -0.06	1.3	±0.05	1.8	±0.15	2.1	1.2	3.7						0.6
2.5	2.5	+0.02 -0.08	1.7	±0.07	2.3		2.6	1.5	4.6						0.9
3.0	3.0		2.1		2.7	±0.2	3.2	1.8	5.4	1.1	±0.15				
4.0	4.0	+0.02 -0.10	2.8	±0.1	3.6		4.2	2.4	7.2			1.4			
5.0	5.0		3.5		4.5	±0.25	5.3	3.0	9.0	1.8	±0.2				
6.0	6.0	+0.02 -0.12	4.2	±0.12	5.4	±0.3	6.3	3.6	10.5	2.1					
8.0	8.0		5.6		7.2		8.4	5.0	13.5		2.8				

呼び径	トラス				さら			丸			
	D		H		D		H	D		H	
	基準寸法	許容差	基準寸法	許容差	基準寸法	許容差	約	基準寸法	許容差	基準寸法	許容差
1.2	2.7	0 -0.3	0.5	±0.1	—			2.2	0 -0.3	0.7	±0.1
1.6	3.6		0.7		3.0	1.0					
2.0	4.5		1.0		4.0	0	1.0	3.7		1.2	
2.5	5.6		1.3		5.0	-0.4	1.3	4.6		1.5	
3.0	6.6	0 -0.4	1.4	±0.15	6.0	0	1.5	5.4	0 -0.4	1.8	±0.15
4.0	8.8		1.8		8.0	-0.5	2.0	7.2		2.4	
5.0	11.0		2.4		10.0	0 -0.6	2.5	9.0		3.0	
6.0	13.0	0 -0.6	2.8	±0.2	12.0	0 -0.7	3.0	10.5	0 -0.6	3.6	±0.2
8.0	17.0		3.8		16.0	0 -0.8	4.0	13.5		4.8	